


TS566R SMART CONTROLLER FOR SPRAY VALVES

User Guide

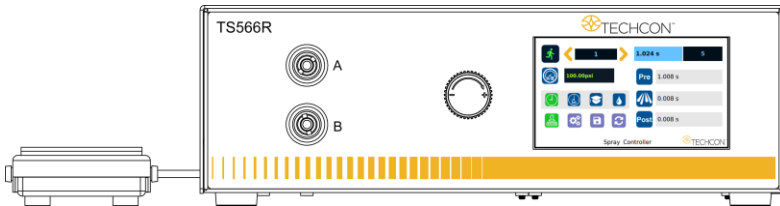

CONTENTS

	Page Number
1. Safety	3
2. Symbol Definitions	4
3. Specifications	5
4. Features	5
5. To Control Spray Valve.....	5
5.1 Connecting the unit.....	6
5.1.1 Login	6
5.1.2 Pressure Calibration.....	7
5.1.3 Controlling mode	8
5.2 Spraying	10
5.2.1 Pressure Adjustment	10
5.2.2 To Change Pressure Unit Display	10
5.2.3 Spray Time Setting	11
5.2.4 Manual/Purge Cycle	12
5.2.5 Automatic Cycle	12
5.2.6 Teach Mode Setting	13
5.3 Stored Program in Memory Cell	14
5.3.1 To store dispense parameters	14
5.3.2 To run in Continuous mode	14
5.3.3 To run in Single Sequence mode	15
5.3.4 To run in Continuous Sequence mode	17
5.3 Cycle Counter	17
5.4 To Change Password	18
5.5 To Connect to Wi-Fi network	19
6. Internet of Thing (IoT)	21
7. Software Upgrade	27
8. Troubleshooting	29
9. Maintenance	30
10. Warranty	30
11. I/O Configuration and End of Cycle Switch	31

1. SAFETY

1.1 Intended Use:

WARNING: *Use of this equipment in ways other than those described in this User Guide may result in injury to persons or damage to property. Use this equipment only as described in this User Guide.*

































OK International cannot be responsible for injuries or damages resulting from unintended applications of its equipment. Unintended uses may result from taking the following actions:

- Making changes to equipment that has not been recommended in the User Guide
- Using incompatible or damaged replacement parts
- Using unapproved accessories or auxiliary equipment

1.2 Safety Precautions:

- Do not operate this unit in excess of maximum ratings/settings
- Always wear appropriate personal protective clothing or apparel
- The fluid may be toxic and/or hazardous. Refer to Material Safety Data Sheet for proper handling and safety precautions
- Do not smoke or use open flame when flammable materials are being sprayed
- This equipment is for indoor use only

2. SYMBOL DEFINITIONS

Symbol	Description	Symbol	Description
	Run (Activate)		Setup
	Valve Pressure		Counter reset
	Atomized Air Pressure		Mac address
	Timed mode		Accept change
	Interrupt mode		Pressure calibration
	Teach mode		Save
	Purge mode		Reset time in Teach mode
	Spray		IP address
	Pre-Spray		Post-Spray
	Login/Logout		Cancel
	Run Method		Sequence Mode
	Continuous Mode		Sequence Continuous Mode
	E-Stop		Change Password
	Remote Server		On line
	Off Line		Stand Alone Control Mode
	Robotic Mode		Max Input Pressure Setting

3. SPECIFICATIONS

Size	290mm x 212mm x 98mm (11.4" X 8.3" X 3.9")
Weight	3.02 kg (6.651 bs)
Input Voltage	24VDC
Output Voltage Range	0-24 VDC
Rated Power	15W
Air Input	100 psi (6.9 bars) Max.
Air Output	0-99.9 Psi (6.9 bar)
Pollution Degree	II
Installation Category	I
Indoor Use	Altitude up to 2,000m (6,562ft)
Operating Temperature	0°C to 50°C (32°F to 122°F)
Storage Temperature	-10°C to 60°C (14°F to 140°F)
Max. Relative Humidity	80% for temperature up to 31°C (87.8°F) Decreasing linearly to 50% relative humidity at 40°C (104°F)
Timer	0.008-99.99 seconds
Cycle Mode	Timed, Interrupt, Teach, Purge
Timing Repeat Tolerance	+/- 0.001%
Cycle Rate	900 cycles/min
Display	Touch Screen, Resistive
Meets or exceed	CE, TUV and NRTL

4. FEATURES

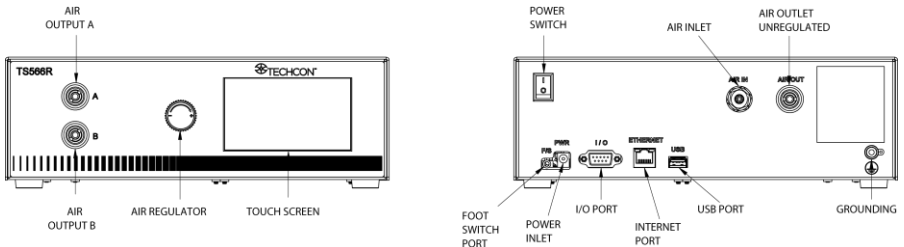


Figure 1.0

5. TO CONTROL SPRAY VALVE

CAUTION: A 5-micron filter (TSD800-6) must be installed with the unit to ensure proper air filtration.

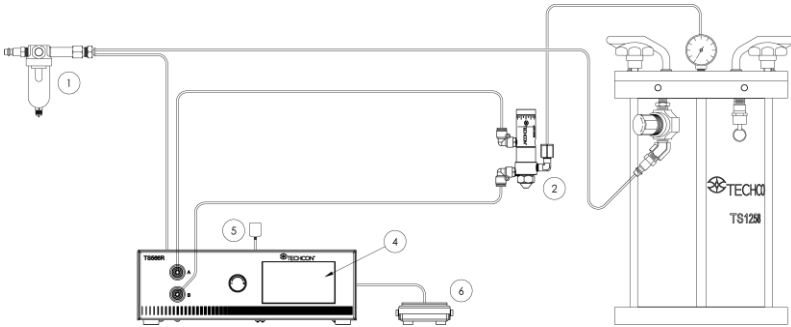


Figure 2.0


Items	Description
1	Air Filter
2	Valve (not included)
3	Pressure Pot (not included)
4	Display
5	Power Adapter
6	Foot Switch

5.1 Connecting the Unit: (Refer to Figure 1.0 and 2.0)


1. Connect the power cord, foot switch to the back of the unit.
2. Connect Valve air hose to Port A (Not Regulated)
3. Connect Atomized air hose to Port B (Regulated)
4. Press the Power switch to turn on the unit.

5.1.1 Login

1. Touch the Login Icon to enter login screen

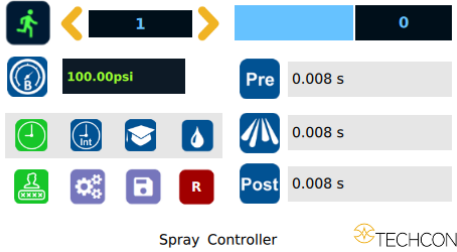

2. Enter "0000" in Password window

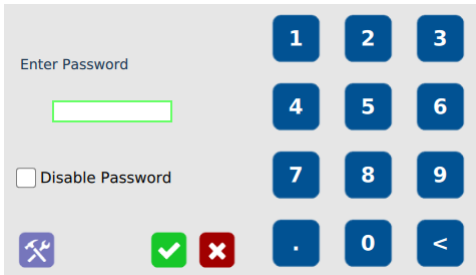

3. Touch the Check Mark icon to save and exit



5.1.2 Pressure Calibration

Note: Pressure calibration must be performed when the unit is activated for the first time.


1. Using a pressure gauge, verify that the input pressure line is delivering approximately 100 psi


Note: If input pressure is not 100 psi, calibration will result in a mismatch between the display pressure and the actual pressure on output port B

2. Once you have verified input pressure, touch the Calibration icon to enter calibration screen.




Please keep in mind that the exact pressure being fed must be indicated correctly in this menu prior to calibrating the pressure. Not doing so may cause the pressure display to show the incorrect pressure.

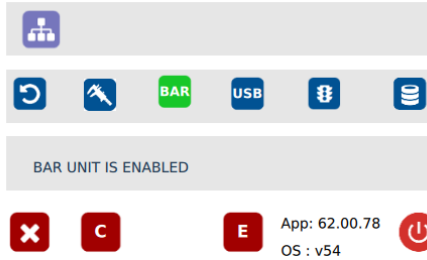


3. Turn pressure adjustment knob counterclockwise until the wheel can no longer be turned.
4. Touch the 0 icon to set the pressure to 0 
5. Turn pressure adjustment knob clockwise until display output pressure is 100 psi



6. Touch the 100 icon to set the pressure to 100 

Warning: Do not turn knob all the way clockwise. 100 psi upper bound should be set as soon as display output pressure goes from 99 to 100 psi. Continuing to turn knob clockwise despite pressure on display already being set at 100psi will result in incorrect output pressure readings if the 100 icon were to be pressed at that time

Note: The digital values shown at “0” and “100” icons are for reference only. The actual calibrated values will be different

7. Touch the Reboot icon to save the settings and reboot the system 
8. Wait until the system completes the rebooting sequence and the home screen is displayed


The unit is now calibrated and ready to operate

5.1.3 Controlling Mode

The TS560R can be used as stand-alone controller or integrated to any robot/automation system.

- A. To use as stand-alone controller:
Go to setup screen to check for controlling mode. If the icon “C” is showing, then it is already set as stand-alone controlling mode. If the icon “R” is showing, press this icon to change to “C”
- B. To use as integrated controller to robot/automation
Press icon “C” to change to “R”

Note: Users will experience inconsistent dispensing and intermittent behaviors with their dispensing valves if attempting to run the TS550R in controller mode when interfacing with the robot.

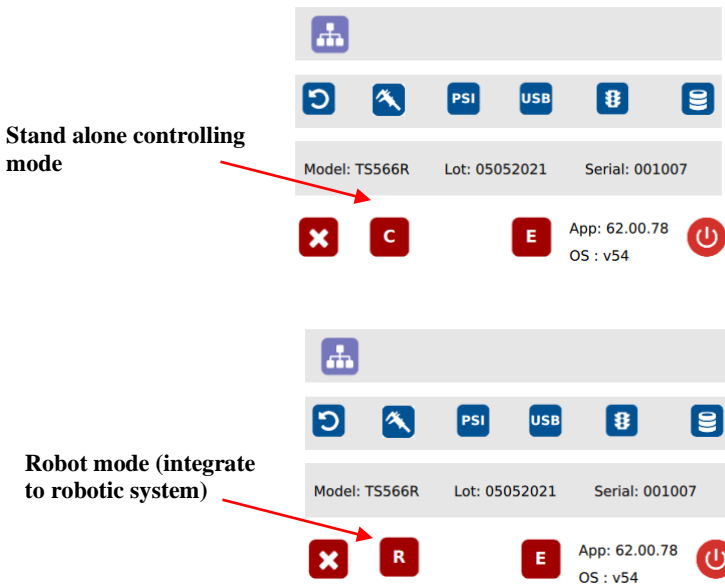


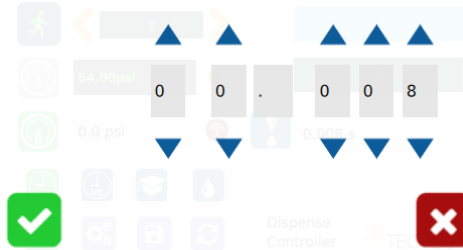
5.2 SPRAYING

5.2.1 Pressure Adjustment

Note: Pressure in Port A (I) is not regulated. It delivers the same pressure as the supplied inlet pressure. This pressure is to activate the valve. Make sure the supplied pressure is at least 70 psi (4.8 bar)

Pressure in Port B is regulated. This pressure is to control the atomized air spray. Adjust the pressure accordingly to achieve desired spray results.


1. Touch the “Pressure B” icon to enter the pressure setup screen 
2. Touch the Up and Down arrows to set the desired atomized pressure





3. Touch the Check Mark icon to save and exit 

5.2.2 To Change Pressure Unit Display

Note: The default pressure unit is PSI. To change pressure unit to BAR, follow below instructions.

1. Touch the Setup icon to enter setup screen 

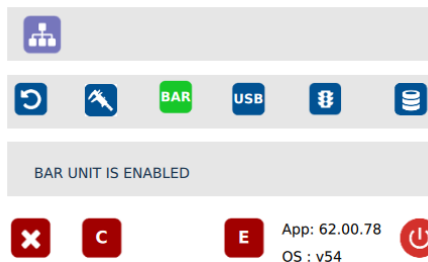

2. Press the “BAR” icon to change pressure unit to BAR 


3. Touch the X icon to save and exit 

5.2.3 Spray Time setting

Note: A complete cycle consists of Pre-Spray, Spray and Post-Spray.

Pre-spray: Atomized air turned on before the valve is opened.


Post-spray: Atomized air stayed on after the valve is closed.

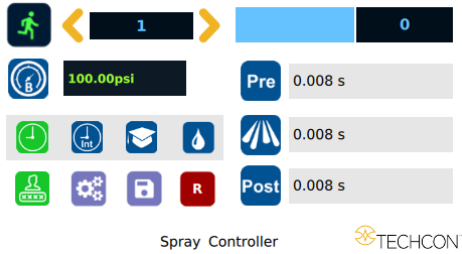

1. Touch the “Pre” icon to setup pre-spray time



2. Touch Up and Down arrows to set the desired pre-spray time

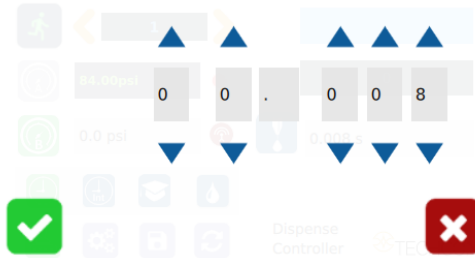

3. Touch the Check Mark icon to save and exit



4. Touch the “Post” icon to setup post-spray time



5. Touch Up and Down arrows to set the desired post-spray time

6. Touch the Check Mark icon to save and exit



5.2.4 Manual/Purge Cycle Setting

1. Touch the Purge icon to select the purge cycle.
The Purge icon will turn to green color.



2. Press and hold down the foot switch to activate the purge cycle.

Alternately, touch and hold the Run icon on the display to activate the purge cycle.



5.2.5 Automatic Spray Cycle Setting


1. Touch the “Timed” mode icon to set the spray cycle time. The icon will turn to green color.



2. Touch the “Spray” icon to enter the setup screen



3. Touch the Up and Down arrows to set the desired spray time

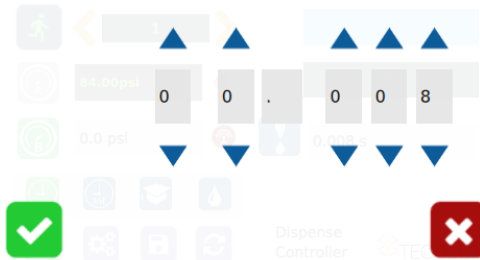

Note: The minimum activation is 0.008 second

4. Press the Check Mark icon to save and exit
5. Press the foot switch to activate the “Timed” spray cycle. Alternately, touch the Run icon on the display to activate the “Timed” spray cycle



Note: The unit has an “Interrupt” mode feature. In this mode, the “Timed” spray cycle can be disrupted if the foot switch is released and resumed when the foot switch is depressed again.

6. Touch the “Interrupt” icon to activate “Interrupt” mode. The icon will turn to green color



5.2.6 Teach Mode Setting

In the teach mode, the spray time will be accumulated as long as the foot switch is depressed. This is helpful in determining the required spray time when the dispense output is known.

1. Touch the “Teach” icon to enter the teach mode




2. Touch the “Time Reset” icon to set timer to zero
3. Press and hold down the foot switch, the spray time will be accumulated
4. Release the foot switch when the desired amount of fluid has sprayed
5. Touch the “Timed” icon to transfer the accumulated spray time to “Timed” mode
6. The unit is now set to repeat this “Timed” cycle

5.3 Stored Program in Memory Cell


The unit has 50 memory cells to store all parameters. The controller can activate all memory cells in sequence mode.

5.3.1 To store dispense parameters

1. Touch the forward or backward arrow to select the desired memory cell.



2. Enter all the desired parameters then touch the “Save” icon to save the data

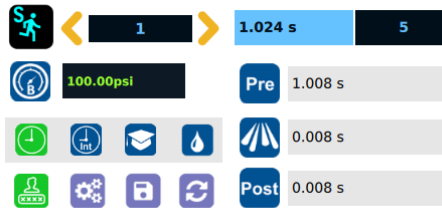


Spray Controller




5.3.2 To run in Continuous Mode

The controller can be setup to repeat the run continuously.

1. Touch the Setup icon to enter the setup screen

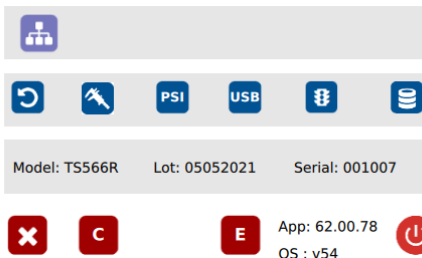

2. Touch the “Run Method” icon

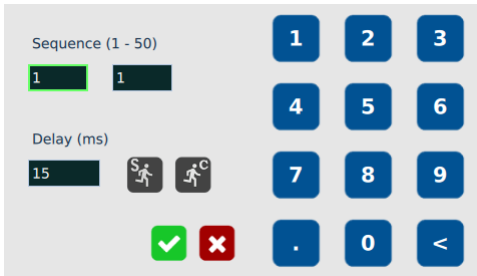

3. Enter the delay time (ex. 5000 ms)

NOTE: The minimum delay time is 15ms

4. Touch the “Continuous Run” icon




5. Touch the Check Mark icon to save



6. Touch the X icon to exit



The screen will look similarly to the screen below:

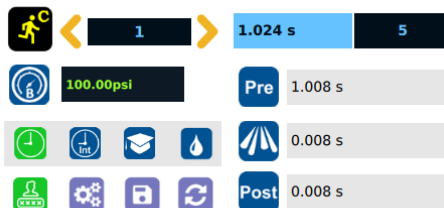


Spray Controller




Note: If the controller is set to activate memory cell 1 and the delay time is set at 5000 ms, the controller will activate memory 1 continuously with 5000 ms delay between each activation.

5.3.3 To run in Single Sequence Mode

1. Touch the “Run Method” icon to enter sequence mode setup

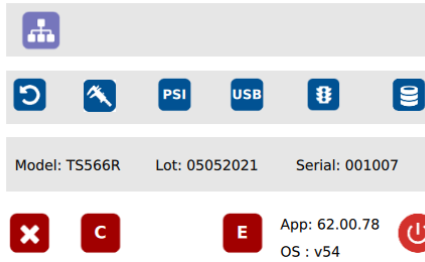

2. Enter number of memories to be run in sequence (ex. 1 to 3)

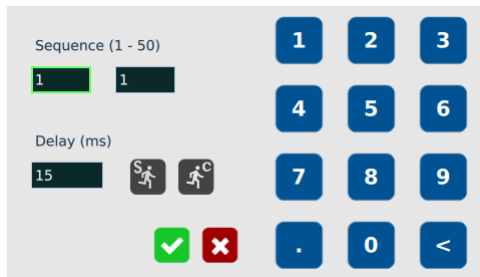

3. Touch the “Sequence Mode” icon




4. Touch the Check Mark icon to save



5. Touch the X icon to exit



The screen will look similarly to the screen below:

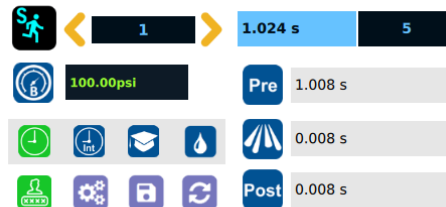





Spray Controller




Notes:

- A. *If there is no delay time entered in the setting, the operator has to press the foot switch or touch the Run icon after each memory cell is completed to activate the next memory cell.*
- B. *If delay time is entered in the setting, the controller will activate the next memory cell in sequence automatically. Delay time must be at least 15 ms.*

5.3.4 To run in Continuous Sequence Mode

1. Follow steps 1 to 2 above and enter the waiting time “delay time” between each activation.
2. Touch the “Sequence Mode” icon 
3. Touch the “Continuous Mode” icon 
4. Touch the Check Mark icon to save 
5. Touch the X icon to exit 

The screen will look similarly to the screen below:

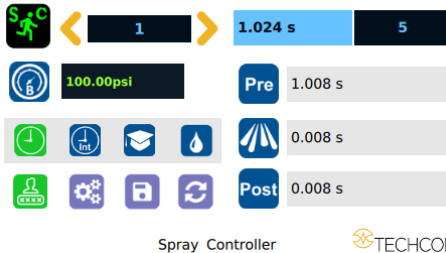

Note: *If the sequence mode is set to activate memory cells 1 – 3, and the delay time is set at 5000 ms, the controller will activate memory 1 to 3 continuously with 5000 ms delay between each activation. The delay time must be at least 15 ms.*


5.4 Cycle Counter

The cycle counter records the numbers of spray cycle being activated. Up to 999,999 cycles can be recorded. To reset the counter, follow steps below:

1. Touch the Setup icon to enter setup screen



2. Touch the Counter Reset icon to reset the counter

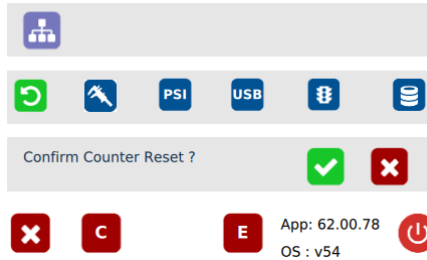

3. Press the check mark icon to confirm



4. Touch the X icon to exit



5.5 To Change Password


Note: The default password is "0000". To change password, follow the instructions below.

1. Touch the Login icon to enter the login screen






Spray Controller



2. Touch the change “Password” icon 

Enter Password

Disable Password




1	2	3
4	5	6
7	8	9
.	0	<

3. Enter the old password, then enter the new password

Old Password


New Password

Re-Enter Password

1	2	3
4	5	6
7	8	9
.	0	<

4. Touch the Check Mark icon to save 

5. Touch the X icon to exit 


6. INTERNET of Thing (IoT)

6.1 Setup webserver on the computer


1. Go to Techcon Website (www.techconsystems.com), under resources tab, download “Software download for IoT”, and focus mainly on copying the following files to your computer:
 - a. The “portal.exe” file
 - b. The “timezone.zip” file
2. Create a new folder and name “IoT” or any desired name
3. Copy the “portal.exe” file and the “timezone.zip” file in the “IoT” folder
4. Click on the “Windows” start icon



5. Type: “cmd” in the box (as show below)

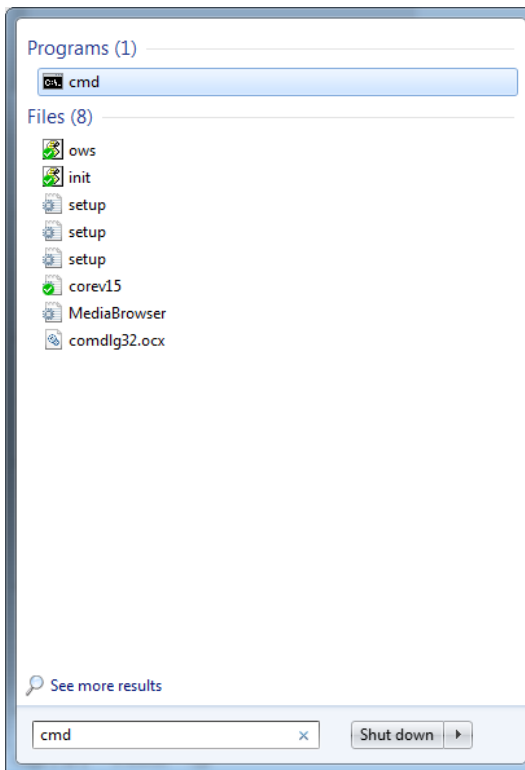


6. Press the “Enter” button
The screen should appear as shown below

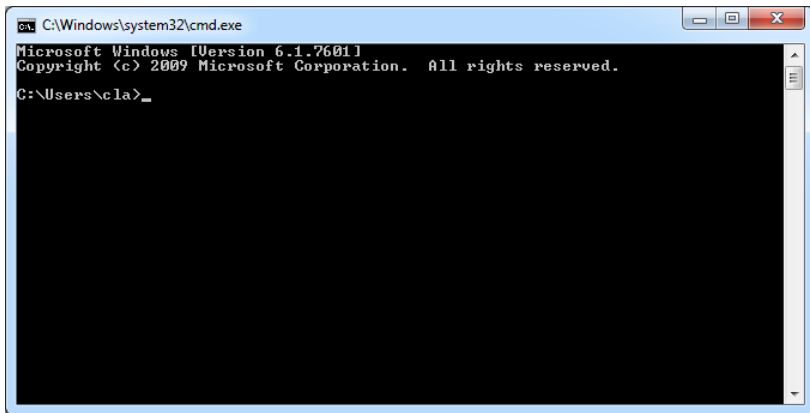

```
C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\c1a>
```


7. Type: “cd \iot” then press the “Enter” button

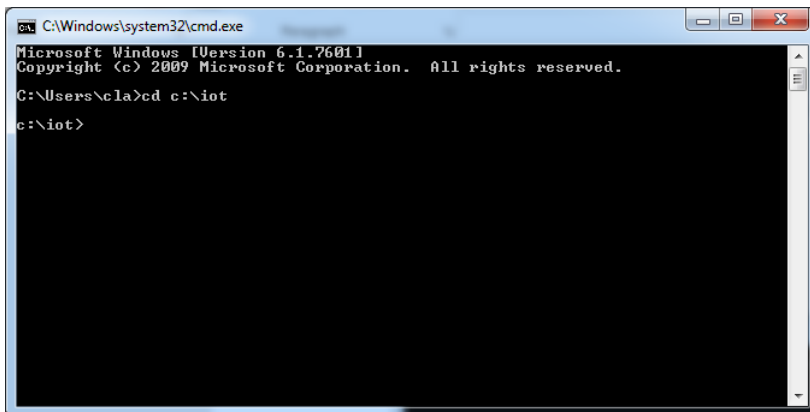

```
C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\c1a>cd c:\iot
c:\iot>
```


8. Type: “set OKI_IOT_PREFIX=MyPrefix” then press the “Enter” button

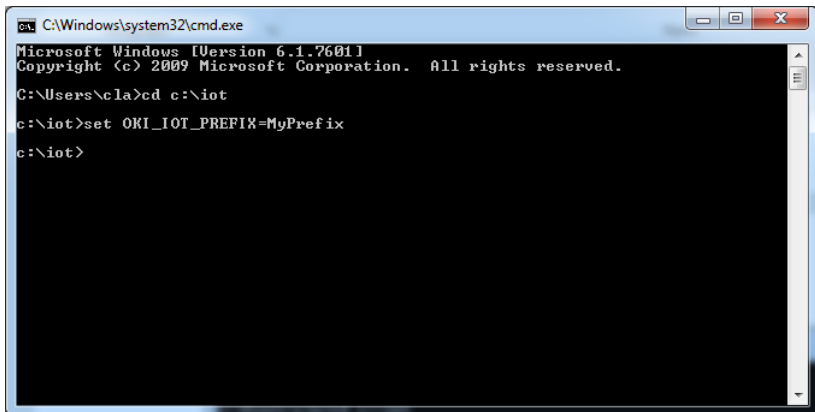

```
C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\c1a>cd c:\iot
c:\iot>set OKI_IOT_PREFIX=MyPrefix
c:\iot>
```


9. Type: “set ZONEINFO=C:\iot\timezone.zip” then press the “Enter” button

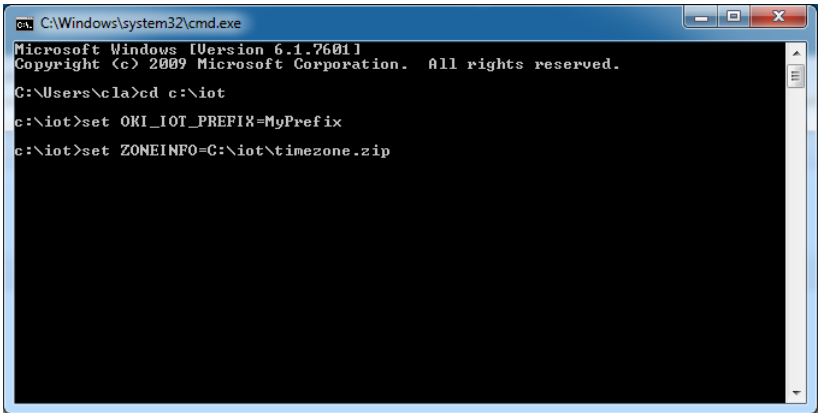

```
C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\c1a>cd c:\iot
c:\iot>set OKI_IOT_PREFIX=MyPrefix
c:\iot>set ZONEINFO=C:\iot\timezone.zip
```

10. Type: “ipconfig” then press the “Enter” button

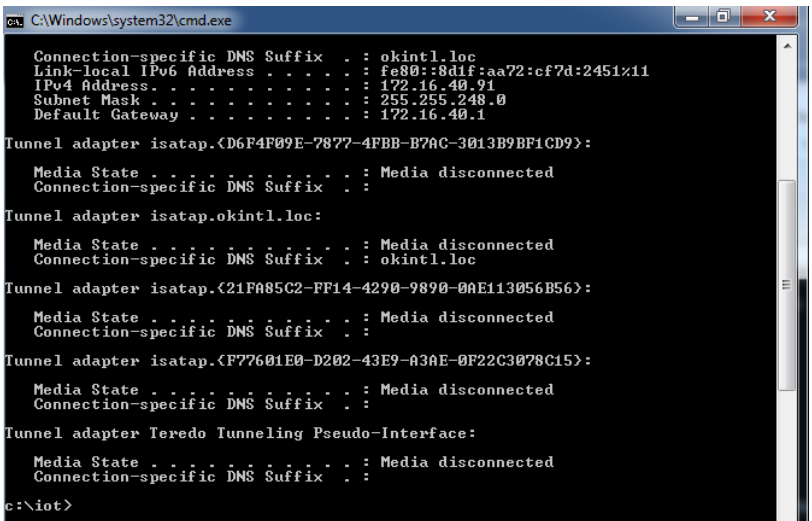

```
C:\Windows\system32\cmd.exe

Connection-specific DNS Suffix . . . . . : okintl.loc
Link-local IPv6 Address . . . . . : fe80::8d1f:aa72:cf7d:2451%11
IPv4 Address. . . . . : 172.16.40.91
Subnet Mask . . . . . : 255.255.248.0
Default Gateway . . . . . : 172.16.40.1

Tunnel adapter isatap.{D6F4F09E-7877-4FBB-B7AC-3013B9BF1CD9}:
Media State . . . . . : Media disconnected
Connection-specific DNS Suffix . . . . . :

Tunnel adapter isatap.okintl.loc:
Media State . . . . . : Media disconnected
Connection-specific DNS Suffix . . . . . : okintl.loc

Tunnel adapter isatap.{21FA85C2-FF14-4290-9890-0AE113056B56}:
Media State . . . . . : Media disconnected
Connection-specific DNS Suffix . . . . . :

Tunnel adapter isatap.{F77601E0-D202-43E9-A3AE-0F22C3078C15}:
Media State . . . . . : Media disconnected
Connection-specific DNS Suffix . . . . . :

Tunnel adapter Teredo Tunneling Pseudo-Interface:
Media State . . . . . : Media disconnected
Connection-specific DNS Suffix . . . . . :

c:\iot>
```

11. Record the Server IPv4 address show in the “IPv4 Address” line on the above screen; For this example, the Server IP address is: 172.16.40.91
This address will be entered in the controller screen later.
12. Type: “.portal” then press the Enter button

```

c:\Windows\system32\cmd.exe - \portal
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\c\la>cd c:\iot
c:\iot>set OKI_IOT_PREFIX=MyPrefix
c:\iot>set ZONEINFO=C:\iot\timezone.zip


c:\iot>.\portal
Hostname: okigg-cla2
SendTwillio: true
ENU: OKI_IOT_PREFIX = 'MyPrefix'
OKI Portal, v4
+ [34mINFO+ [0m[0000] Connecting Mongo + [34mctx+ [0m=d
b ← [34murl+ [0m="mongodb://oki:UqpfA3bdEds157621.mlab.com:57621/oki-portal"
Collection Prefix: OKI IOTMyPrefix
2018/01/05 15:07:11 Storing Counts because none were updated.

2018/01/05 15:07:11 Starting server on: http://localhost:8090
2018/01/05 15:07:11 Listening for TCP at localhost:4900.

```

13. Go to any computer and open any web browser

14. Type in: <http://localhost:8090/> then press the enter button



You are now in the webserver site. The screen below will be displayed





DISPENSING SOLUTIONS WORLDWIDE

Techcon Systems provides precision fluid dispensing & adhesive dispensing equipment, and solutions to service industrial manufacturing markets.

[Visit Product Site](#)



ELECTRONICS BENCH TOOL SOLUTIONS

Metalcal is a leading global provider of bench tool solutions, delivering the optimal balance of performance and reliability for electronics production assembly.

[Visit Product Site](#)

15. Click the “Login” button

16. Enter “admin” in the Login box

17. Enter “1001” in the Password box

Login
X

[Use Demo User](#)

Login

Cancel
Login


18. Go to the setup screen of the controller and touch the “Remote Server” icon



19. Enter the Server IPv4 address recorded in step #11 into Remote IP address box

20. Touch the green check mark icon to save


21. The controller is now connected to the webservice site.

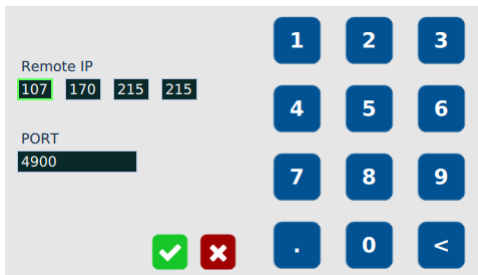

6.2 Making Parameters Adjustment from the webserver


Go back to the webserver site and click on the “Controllers” menu

Click on the active controller link

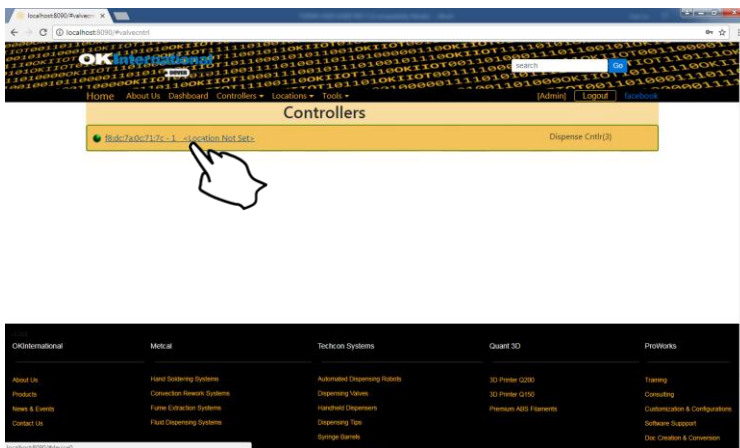


The controller screen will be displayed in the webserver as shown below.

The controller parameters such as pressure and dispense time can be adjusted from the webserver.

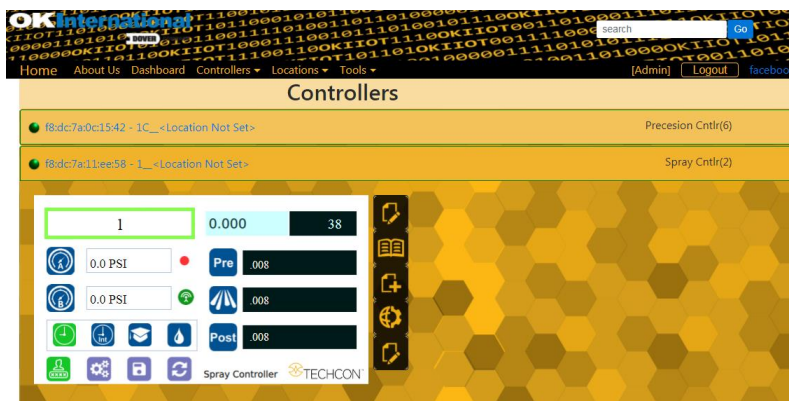

Click on the “Edit” icon

The parameter screen will appear as shown below:

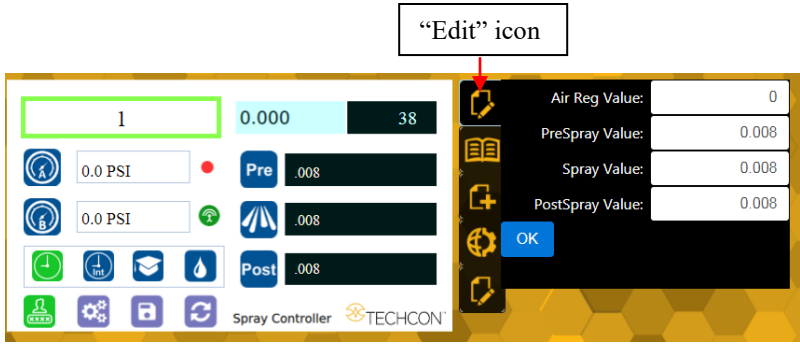

Proceed to make changes
 Click OK button to save
 The new parameters will be displayed on the controller


7. SOFTWARE UPGRADE

Note: For future software upgrade, follow the instructions below.


1. Download the latest software version from Techcon website and copy it to a blank USB thumb drive. **Note: Do not put the software file inside a folder**
2. Make sure that the unit is turned off
3. Insert the USB drive to the USB port located in the back of the unit
4. Turn on the unit
5. Wait while the system is loading the new software. This process can take a few minutes



6. Wait until the system completes the software update from the USB drive and the first touch-screen calibration is displayed

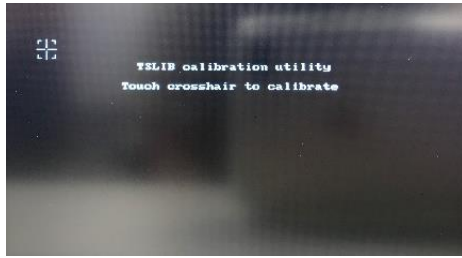

7. **Remove the USB drive from the USB port before proceeding to the next step**
8. Follow the instructions on the display to calibrate the touch screen by touching the crosshair at five different points. **Note: In order to accurately calibrate the touch screen, it's recommended that the stylus pen is used**

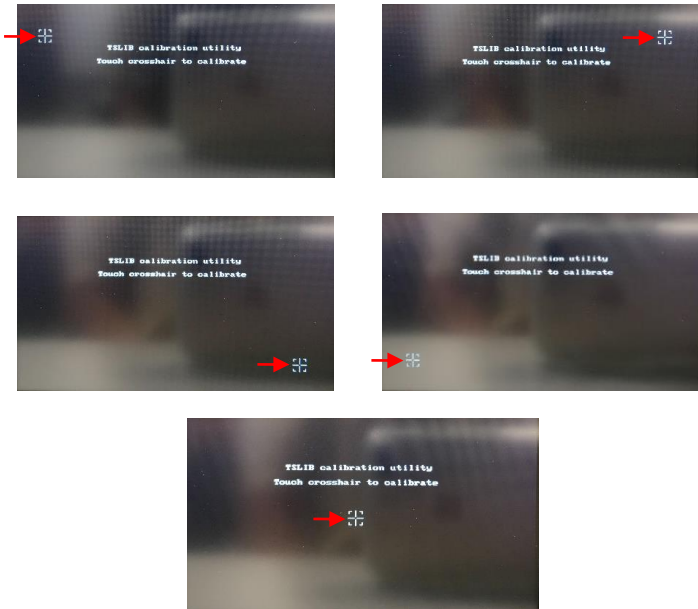

9. Wait until the system completes the rebooting sequence and the home screen is displayed
10. **Repeat sections 5.1.1 and 5.1.2 to re-calibrate the air pressure**

8. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTION
Display does not light up	<ul style="list-style-type: none"> • No power inputs 	<ul style="list-style-type: none"> • Check power cord connections • Turn on power
System will not actuate	<ul style="list-style-type: none"> • Supplied pressure dropped below “Low Pressure” setting • Foot switch not plugged in or improperly plugged in • Defective foot switch • Broken wire or loose connection inside unit • Defective solenoid • Defective PC board 	<ul style="list-style-type: none"> • Increase supplied pressure • Check foot switch connection • Foot switch needs to be repaired or replaced • Unplug power cord and disconnect air supply. Remove cover and check for broken wires or loose connections • Replace solenoid • Replace PC board
System will not pressurize	<ul style="list-style-type: none"> • Insufficient air pressure • Air hoses not plugged in • Regulator defective 	<ul style="list-style-type: none"> • Increase air supply pressure • Check connection • Replace regulator
Inconsistent spray coverage	<ul style="list-style-type: none"> • Air bubbles in material • Activation time is too low 	<ul style="list-style-type: none"> • De-air material • Increase activation time

9. MAINTENANCE

The controller is designed and built to be relatively maintenance free. To assure trouble free operation, please follow below steps:

1. Make certain air supply is clean and dry.
2. Avoid connecting the unit to excessive moisture or solvent saturation
3. Avoid connecting air supply exceeding 100 psi (6.9 bars)
4. Use only Amyl Alcohol to clean outside surface of the main housing
5. Use only soft cloth to clean the display screen

10. LIMITED WARRANTY

OK International warrants this product to the original purchaser for a period of 2 years from date of purchase to be free from material and workmanship defects but not normal wear-and-tear, abuse and faulty installation. Defective product or subassembly and components under warranty will be repaired or replaced (at OK International's option) free of charge. Customer with defective product under warranty must contact the nearest OK International office or distributor to secure a return authorization prior to shipping the product to the assigned OK International authorized service center. For nearest OK International office or distributor contact information, please visit www.techconsystems.com. OK International reserves the right to make engineering product changes without notice.

All returns must be issued with a Returns Authorization number, prior to return.
Send warranty returns to:

Americas

OK International
10800 Valley View Street
Cypress, CA 90630
+1 714 230 2398

Europe

OK International
Eagle Close Chandler's Ford Ind Est
Eastleigh, Hampshire
SO53 4NF
United Kingdom
+44 2380 489 100

Asia


Dover (Shenzhen) Industrial
Equipment Manufacturing Co., LTD.
4th Floor East, Electronic Building
Yanxiang Industrial Zone, High Tech Road
Guangmin New District
Shenzhen, P.R.C
+86 21 64952662

www.techconsystems.com

11. I/O CONFIGURATION AND END OF CYCLE FEEDBACK

During a spray cycle, an open collector circuit closes and remains closed while the valve is dispensing. Pin 3 and 4 can be as feedback signal to synchronize with other devices. Power from an external source is allowed to pass through the circuit to operate a 5 to 24 VDC load. Power consumption must not exceed 250 mA. The load could be a relay, solenoid, counter, LED, or any device that will operate within a 5 to 24 VDC range and a maximum of 250 mA.

Note: During the spray cycle, pin 3 will be grounded. Please make sure the external device (your machine that controls the controller) has the same ground as the controller.

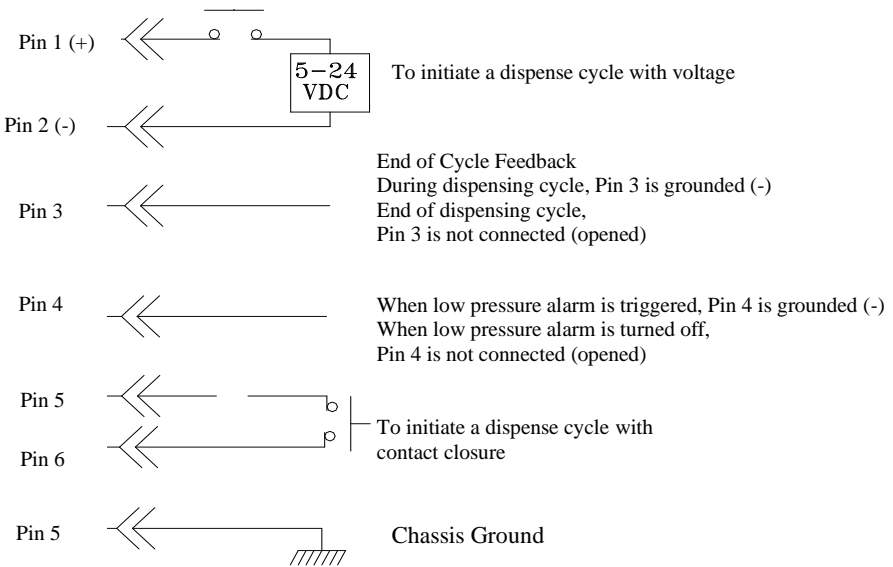

Pin 7, 8, and 9 = Available